

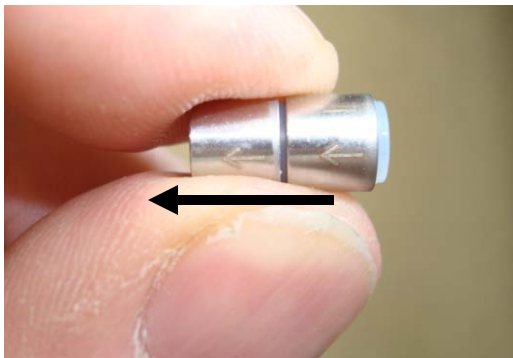


Check Valve Replacement

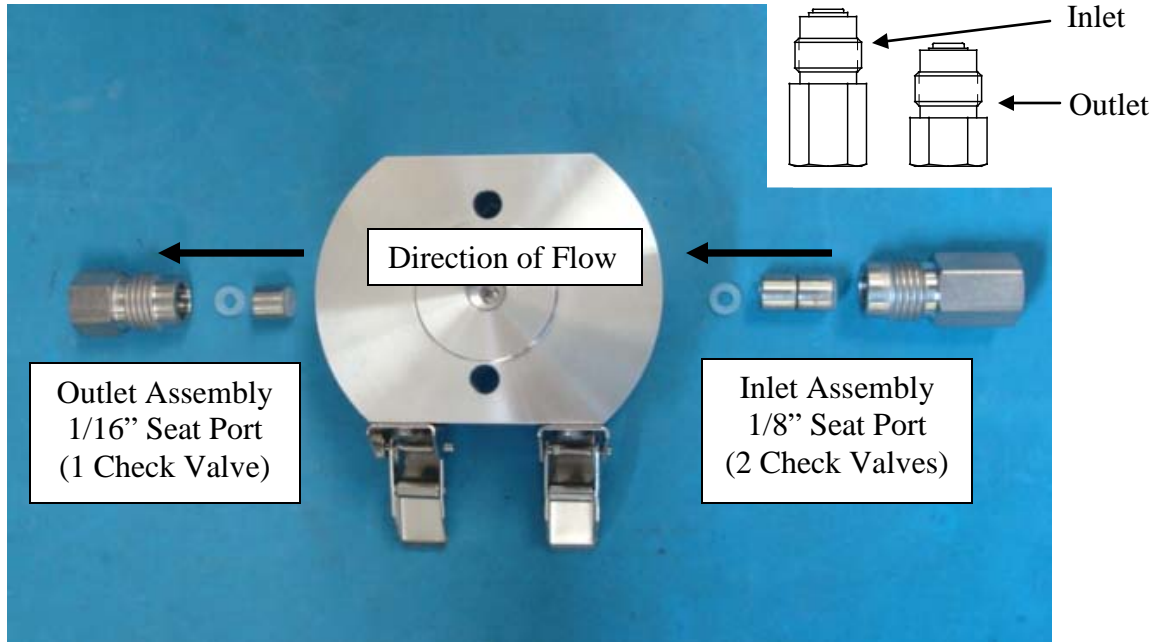

Arrow on Check Valve indicates direction of flow.

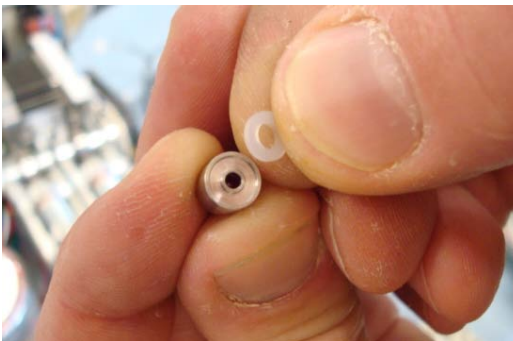

The transparent washer is seated in one end of the capsule. If two capsules are used together, the washer goes in the last capsule only.

After finger tightening the check valve holders in the head assembly, torque the holders to **75 in/lbs.**

